


XL SERIES KEYPAD MENU TREE

October 2010
Version 4.01

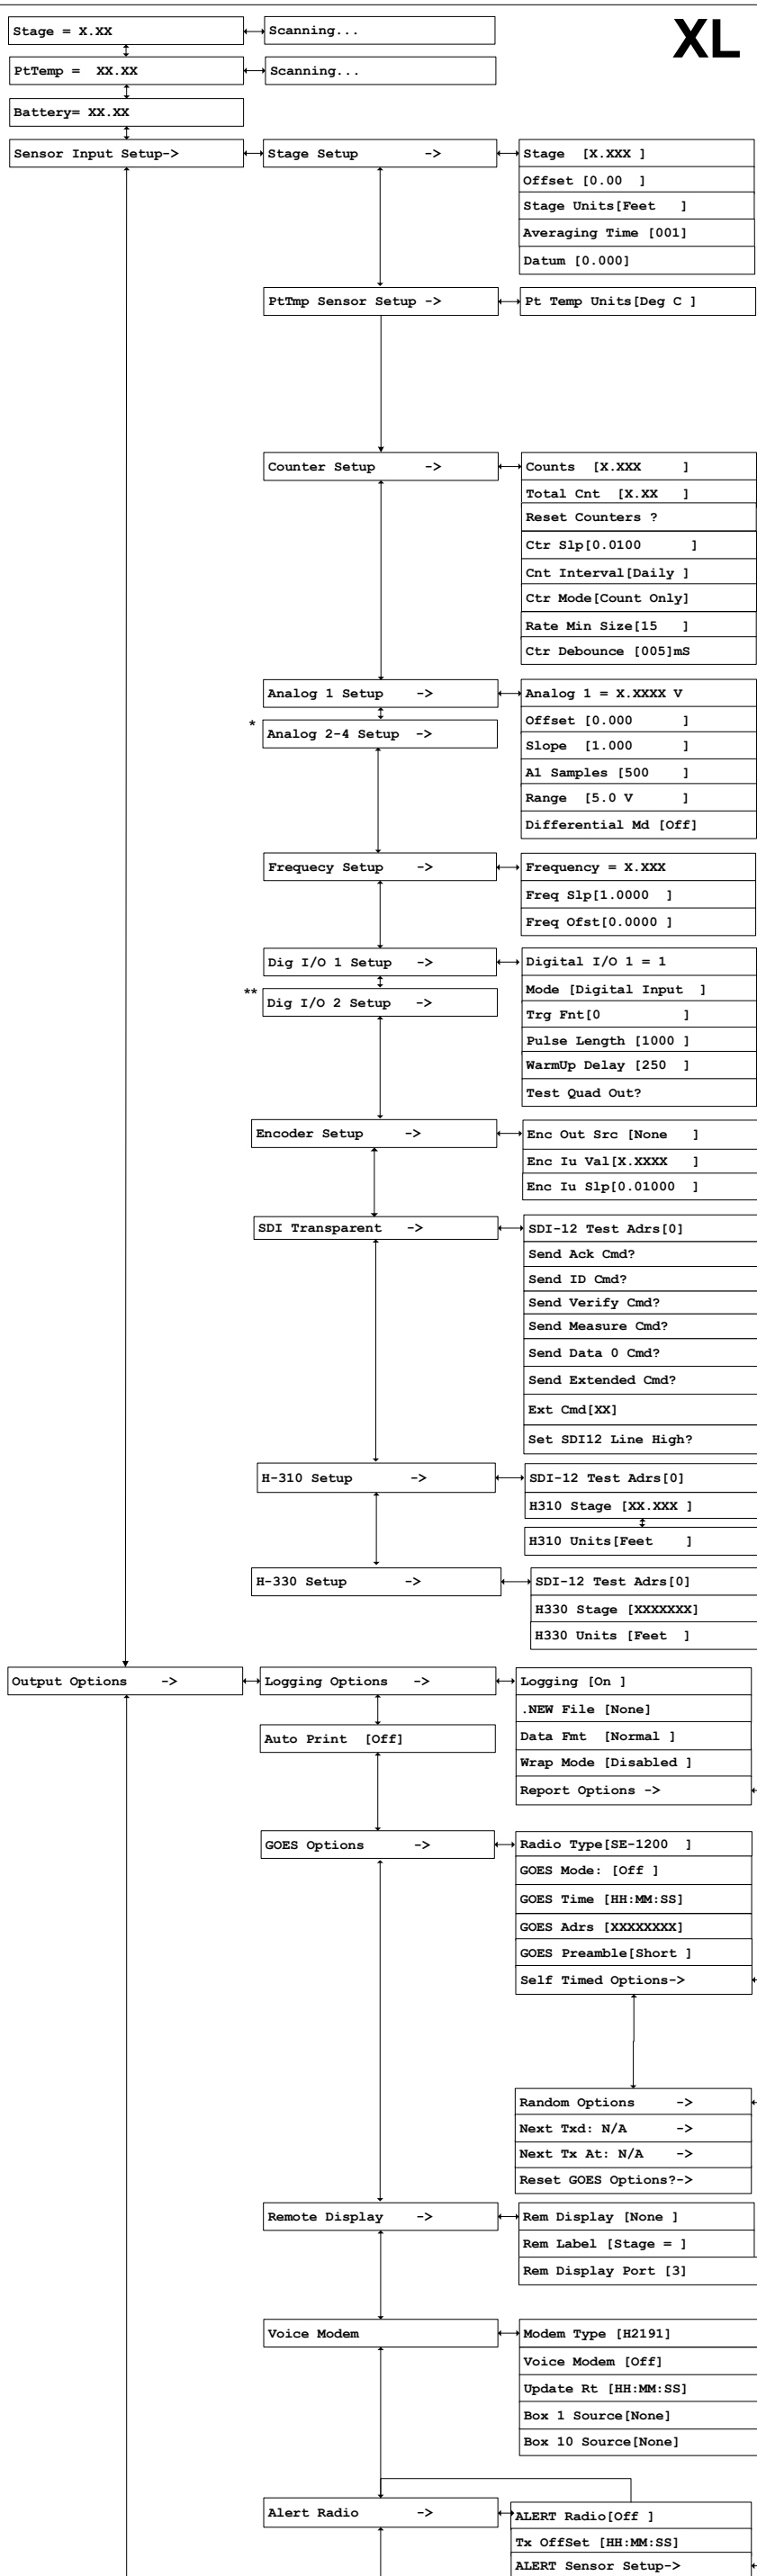

Keyboard Operations

The ENTER Key has three functions:

- I. Pressing the ENTER Key while in the "Stage =" or "Pressure =" fields will start making a pressure measurement of these parameters. This provides the user with a current stage and pressure reading.
- II. The ENTER Key enables you to open fields that can be modified or changed. These menus have a "[]" field in them. For Example, in the "<Output Options>" menu option there are three output options; "FLASH Card", "Chart Drive", or "Shaft Encoder". Each of these options can be changed to either "[ON]" or "[OFF]".
- III. The ENTER Key is used to accept edits or changes. For Instance, you have changed the STAGE Scalar from Slope: [+2.3067] to Slope: [0.70309] to change from feet to meters. You press the ENTER Key to accept this change.

The CANCEL Key has two functions:

- I. The CANCEL Key works the same as the ESCAPE Key does on your computer. For example: you are editing a parameter and you decide not to make a change; you can press the CANCEL Key to abandon your edits.
- II. The CANCEL Key also works as a home key. Meaning, if you are in a sub-menu and wish to return to the upper menu, press the CANCEL Key. This also works if you wish to return to the top menu, the "Stage =" menu.

The ARROW Keys (◀▶▲▼) have four functions:

- I. The ▲ and ▼ ARROW Keys enable you to scroll from one menu to another. When you reach the bottom screen, the ▼ ARROW Key will no longer work. When you are at the top screen, the ▲ ARROW Key no longer works. Menus with a "->" on the right side of the display indicate that there are sub-menus associated to the current screen. Use the ▶ ARROW Key to access the sub-menus. Use the ◀ ARROW Key or CANCEL Key to exit a sub-menu.
- II. The ▲ and ▼ ARROW Keys enable you to scroll through the options within a menu. For example, you want to change the output option from "FLASH Card:[Off]" to "FLASH Card: [On]". You use the ◀ and ▶ ARROW Keys to make your selection.
- III. When Editing numerical parameters, the ▲ and ▼ ARROW Keys also let you increase or decrease the flashing digit by one. They also toggle the "+" and "-" signs.
- IV. The ▲ and ▼ ARROW Keys let you move the cursor back and forth across the screen when you are editing a numerical menu such as the slope and offset. The digit or blank space will flash to let you know where the cursor is.

Continued on
Next Page

Continued on
Next Page

* Analog 2, 3, & 4 are the same menu structure as Analog 1, but don't include the "Differential Md [Off]" function.
** Dig I/O 2 Setup is the same menu structure as Dig I/O 1 Setup

XL SERIES KEYPAD MENU TREE (Continued)

